


SANDING BOX FOR LEFT BEARING

APPLICABLE FOR SANDING BOXES: =99+B1.76-K1

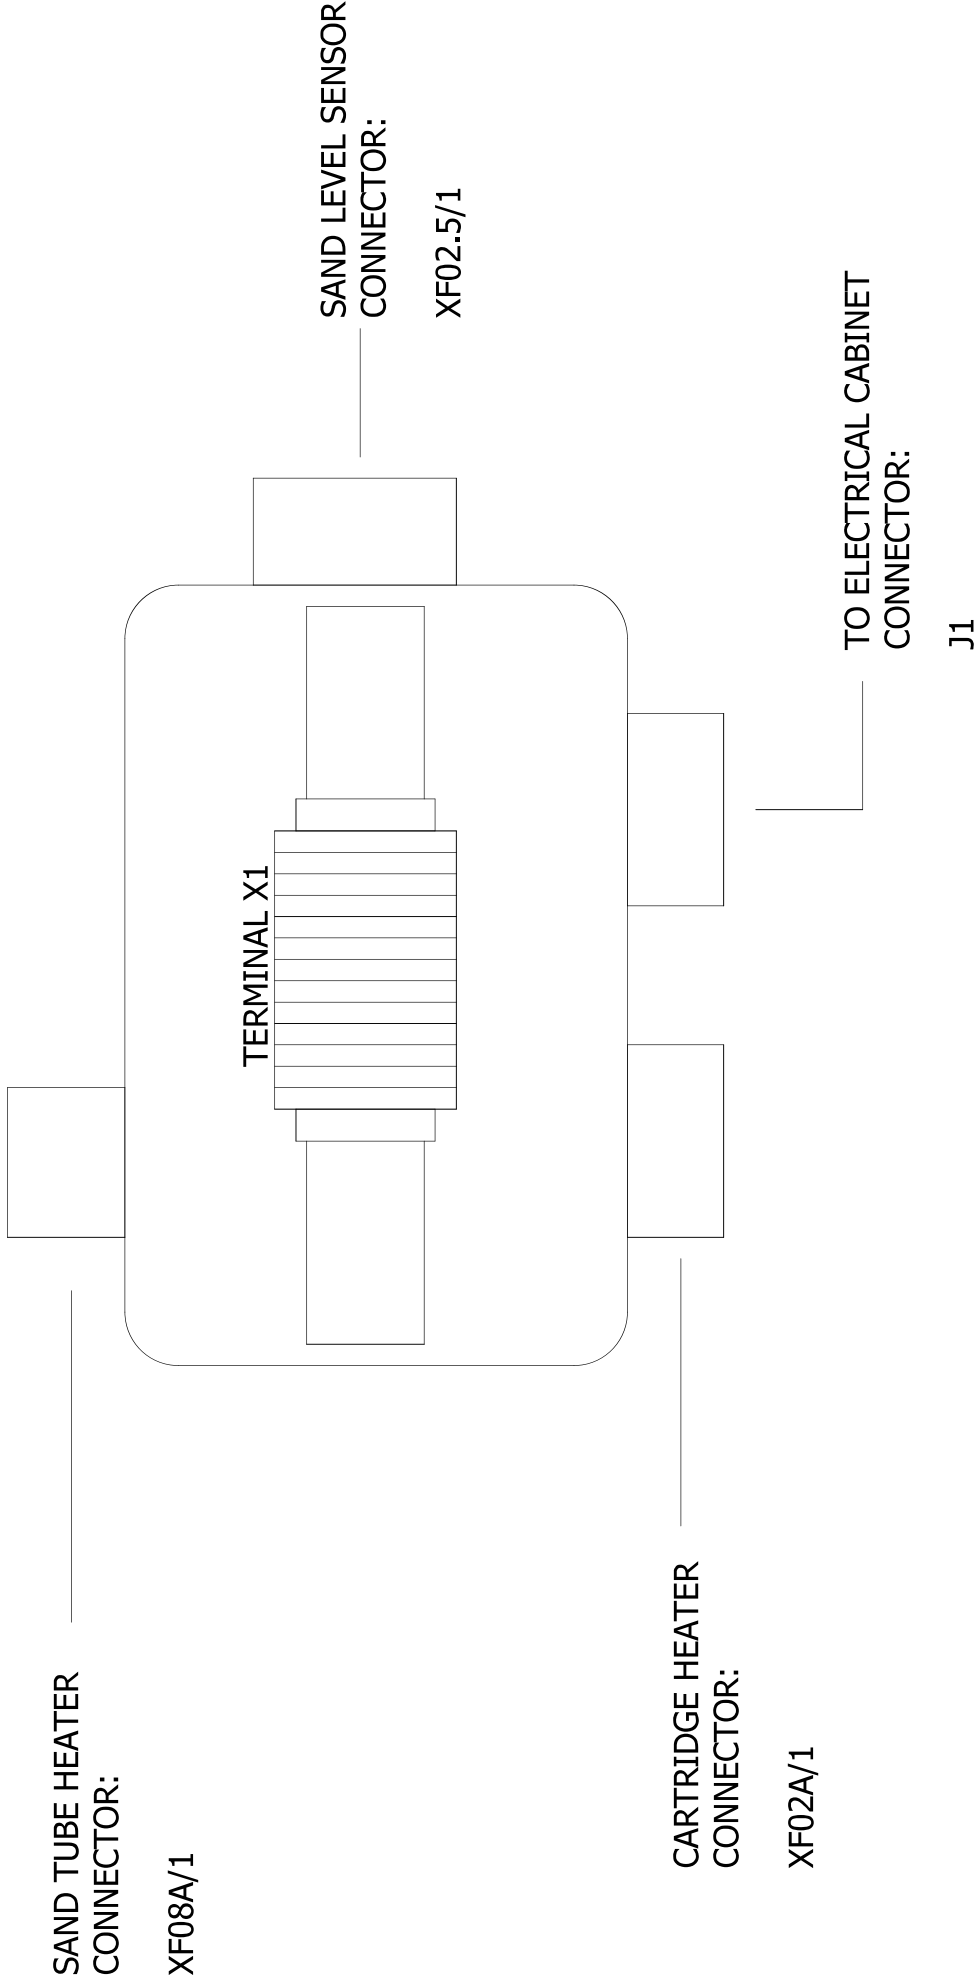

SANDING BOX FOR RIGHT BEARING

APPLICABLE FOR SANDING BOXES: =99+B1.76-K2

