


SANDING BOX FOR LEFT BEARING

APPLICABLE FOR SANDING BOXES: =99+B2.79-K3

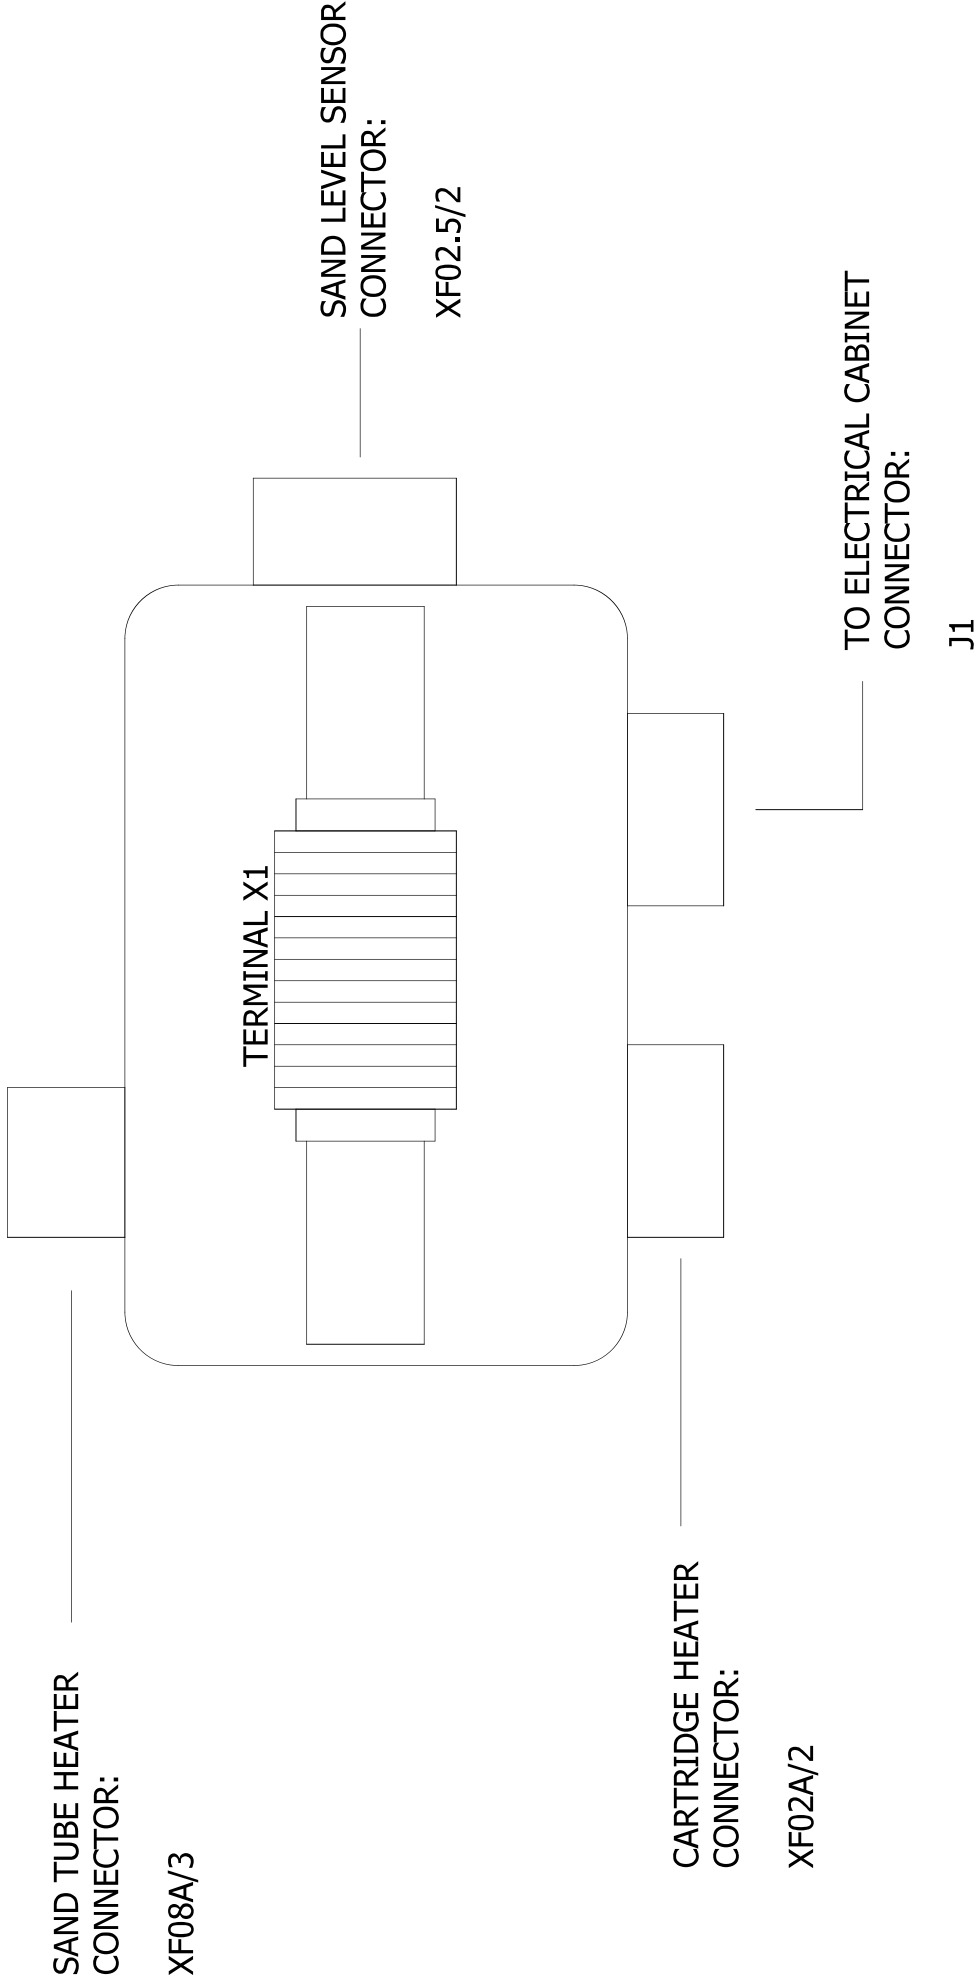

SANDING BOX FOR RIGHT BEARING

APPLICABLE FOR SANDING BOXES: =99+B2.79-K4

